
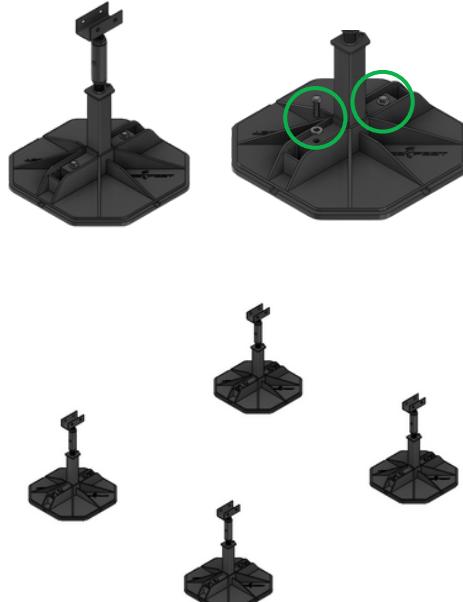




1 Bases

- Place bases & mats on flat surface.
- Secure LA-175 height adjusters to bases using provided base hardware kits.

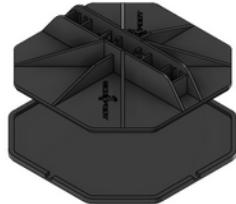



2 Plain Bars

- Once bases are placed. Secure Plain Bars (PB) to bases using the provided PB/CB bolt kits.

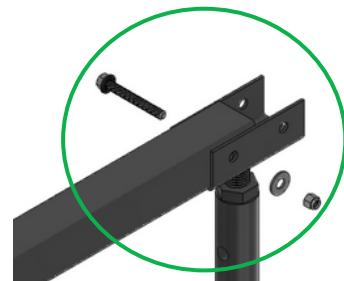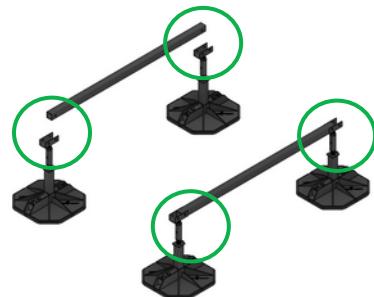


3 Cross Bars

- Once plain bars are secured, place cross bars (CB) on frame and secure with provided PB/CB bolt kits.

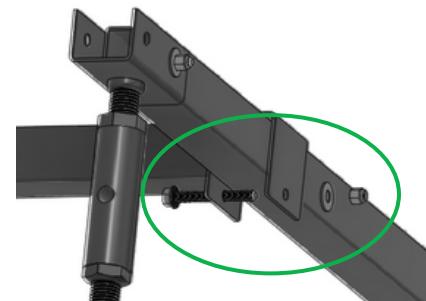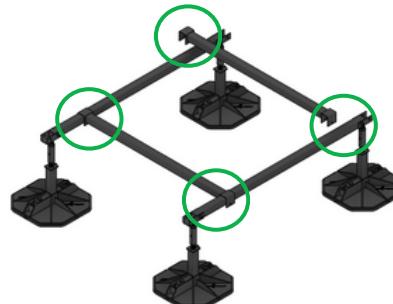

4 Clamp Kits

- Lastly, place and centre equipment on cross bars.
- Secure equipment to cross bars with provided clamp kits.

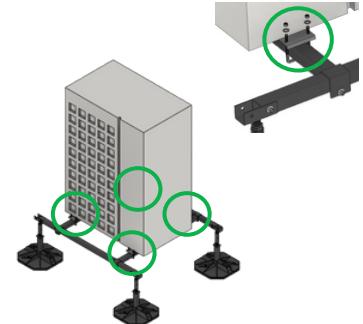

5 Extension Kits

- When Adding extension kits lengthwise, insert plain bars into the outer most LA-175 saddle, secure with hardware, and repeat steps.

