


EcoFrame-XL Install



1 Bases

- Place bases & mats on flat surface.
- Secure LA-175 height adjusters to bases using provided LA-HWK.

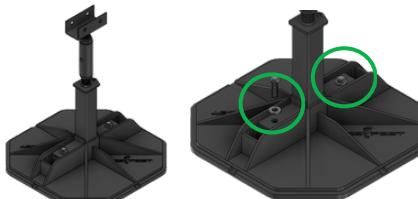



2 Plain Bars

- Once bases are placed. Secure Plain Bars (PB) to bases using the provided PB/CB HWK.




3 Cross Bars

- Once plain bars are secured, place cross bars (CB) on frame and secure with provided PB/CB HWK.

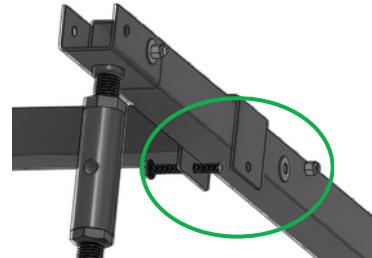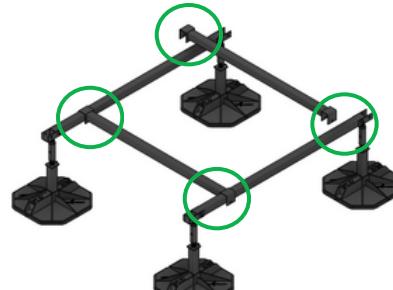


4 Clamp Kits

- Lastly, place and centre equipment on cross bars.
- Secure equipment to cross bars with provided clamp kits.

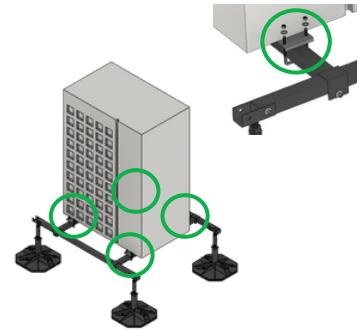

5 Extension Kits

- When Adding extension kits lengthwise, insert plain bars into the LA-175 saddle, secure with hardware, and repeat steps.

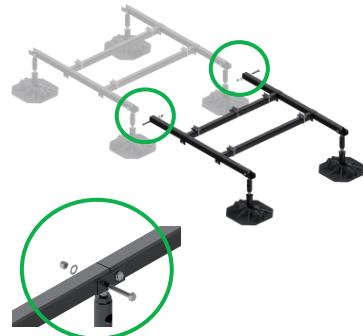

This sheet is meant only to highlight EcoFoot's products and specifications. Information is subject to change without notice. EcoFoot takes responsibility for furnishing quality materials, which meet published product specification. As neither EcoFoot itself, nor its representatives practice architecture, EcoFoot offers no opinion on, and expressly disclaims any responsibility for the soundness of any structure on which its products may be applied. If questions arise as to the soundness of structure, or its ability to support planned installation properly, the Owner should obtain opinions of competent structural engineers before processing. EcoFoot accepts no liability for any structural failure or for resultant damages, and no EcoFoot Representative is authorized to vary this disclaimer.